Q5C User Manual

INTRODUCTION

Thank you for purchasing Micromax mobile phone. To obtain the best performance of your phone, please read this user manual carefully.

Table of Contents

1 Safety 5

1.1 Safety Precautions 5

2 Introduction 5

2.1 Phone and Accessories 5
2.2 Parts of the Phone 6
2.3 Shortcut keys on screen 7
2.4 Description of Display Contents 7
2.5 About UIM Card and the Battery 8
2.6 To switch ON and OFF 9

3 Phonebook 9

3.1 To add a Contact 9
3.2 To search contact 10
3.3 Caller groups 10
3.4 Delete 10
3.5 Copy All 10
3.6 Import Record 10
3.7 Export Record 10
3.8 Speed Dial 10
3.9 Owner Number 11
3.10 Memory Status 11
3.11 To dial a number from the Phonebook 11
3.12 To edit a Contact 11

4 Calling 11

4.1 To dial from the Phonebook 11
4.2 To activate 'mute' during a call 11
4.3 To view contacts during a call 11
4.4 DTMF (Dual Tone MultiFrequency) tone 11
4.5 Call forward 12
4.6 Call waiting 12
4.7 Conference Call 12

5 Call Logs 12

5.1 Missed calls/dialed calls/received calls 12
5.2 Duration 13
5.3 Delete 13

6 Messages 13

6.1 Write new SMS 13
6.2 Inbox 13
6.3 Outbox 13
6.4 Sent items 14
6.5 Drafts 14
6.6 SMS settings 14

6.7 Delete all 14
6.8 Voicemail server 14
6.9 MMS 15
6.10 MMS Inbox 15
6.11 MMS Outbox 15
6.12 MMS Sent items 15
6.13 MMS Drafts 16
6.14 Templates 16
6.15 MMS Settings 16
7 Settings 16
7.1 Customized Phone & Call Settings 16
7.2 Profile Setup 18
7.3 Security Setup 18
8 Multimedia and Entertainment 20
8.1 Camera 20
8.2 Video Recorder 20
8.3 Video Player 20
8.4 Sound Recorder 21
8.5 Music Player 21
8.6 FM Radio 21
9 Fun & Games 22
9.1 Games 22
9.2 Java 22
10 Bluetooth 22
10.1 To Activate/Deactivate Bluetooth Connectivity 22
11 Organizer & Other Applications 23
12 File Manager 24
Memory card 24
13 WAP Services 25
13.1 WAP Browser 25
14 UTK 25
14.1 UTK Services 25
15 Maintenance 26
16 Taking Care of your Device 27
17 After Services 28
18 Inputting Text 29

1 Safety

1.1 Safety Precautions

Please read through the following briefings carefully, and act in accordance with these rules, so as to prevent causing any danger or violating any law.

Safe driving

1) Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.

2) Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

Turn off during a flight: Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.

Turn off the phone when within an area where blasting takes place: Be sure to strictly observe the related laws and statutes by turning off the phone when you are within, or in the vicinity of, an area where blasting takes place.

Turn off the phone when any dangerous goods are in vicinity: Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

In hospital: Please obey the related rules or bylaws of the hospital when using your phone in a hospital. Be sure to turn off your phone when near any medical equipment. Your use of any wireless transmission equipment, inclusive of the phone, will interfere with any medical equipment that is not protected fully, and other electronic equipment items, too. Should you have any question in this regard, please consult a related physician or medical equipment supplier.

Interference: Each and every phone's performance may be affected due to radio interference.

Professional service: The phone must be installed or repaired by no other personnel than professionals. You are likely to suffer a huge risk when you install or repair this phone by yourself, which also goes against the warranty rules.

Fittings and battery: You shall use the fittings and battery acknowledged by the phone manufacturer only. Using unauthorized accessories may tamper the warranty of the device.

Proper use: Please use the phone in the normal way. Do not touch the antenna unnecessarily after the phone is turned on.

Emergency call: You may enter a telephone number (112, etc.) to ask for emergency help after making sure that the phone has been turned on and is in the service status. Press the Send Key to call out.

Disclaimer: Micromax will not bear any responsibility for any incompliance with the above mentioned guidelines or improper usage of the mobile phone. Micromax keeps the right to make modifications to any of the content here in this user guide without any public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such case, the latter shall govern.

2 Introduction

2.1 Phone and Accessories

Open the packing box of the phone and check that you have the phone, standard charger,

standard battery, USB cable, earphone, driver CD, user manual, user guide and warranty card.

2.2 Parts of the Phone

2.3 Shortcut keys on screen

In the standby status, there is a list of menu that shows up on the screen, which indicates: Write new SMS, Camera, FM radio, Nimbuzz, Facebook and Bluetooth.

2.4 Description of Display Contents

The table below lists the icons that may appear on the status bar according to the current priority of the phone.

Icon	Description
	Indicates the network signal strength. More stripes represent stronger signal.
	Indicates that a new short message has arrived.
	Indicates that the short message capacity is full.
	Indicates that a new voice short message has arrived.
	Indicates that the MMS and SMS capacity are full.
	Indicates have new WAP push message.
	Indicates that WAP push message capacity is full
	Indicates that have unread MMS.
	Indicates that have unread Push message.
	Indicates that have new MMS notification.
	Indicates roaming (this icon will be displayed if a foreign UIM card in the phone is inserted).
	Indicates the Normal mode.
	Indicates the Meeting mode.
	Indicates the outdoor mode.
	Indicates the Silent mode.
	Indicates the MP3 player is active.
	Indicates that the MP3 player is paused.
	Indicates that the MP3 player is active with the earpiece inserted.
	Indicates the earpiece.
	FM Radio icon
	Indicates that the alarm clock has been set.
	Indicates that the schedule has been set.

	Indicates that both the alarm clock and the schedule have been set.
	Indicates that countdown has been set.
	Indicates that the call firewall has been started.
	Indicates that the SMS firewall has been started.
	Indicates that both the call firewall and the SMS firewall have been started.
	Indicates the Bluetooth.
	Indicates that FM playing by Bluetooth headset.
	Indicates that music playing by Bluetooth headset.
	Indicates that data is being transmitted.
	Indicates that a Memory card has been inserted.
	Indicates the battery energy. More stripes represent more energy.
	Indicates the call has been protected.
	Indicates have a MO or the calling is progressing.
	Indicates hava misscall.
	Indicates that data service is 1X.
	Indicates that voice call is error.
	Indicates that voice call been connected.

2.5 About UIM Card and the Battery

Please store the cards out of childrens reach.
The card and the contacts are vulnerable to damages due to scratching or bending. Therefore, be careful when using, inserting or removing the cards.
Be sure to switch off the phone before you insert or remove the battery or the card, otherwise, the phone may be damaged.

Removing the battery

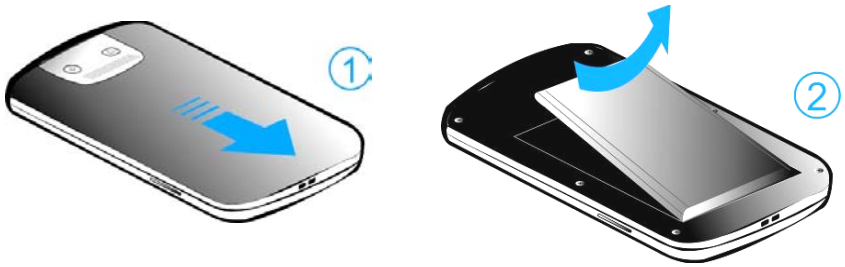

Inserting UIM card and battery

Charging the battery

Insert the plug of the charger into the interface of the phone, and insert the charger into the power socket carefully. The battery icon will blink.

Tips:

The battery icon displayed on the screen indicates that the battery power is low. Please charge the battery following the steps above.

Please charge the battery before you use the newly purchased phone. We suggest you charge the battery for 4 hours continuously for the first time.

We suggest you recharge the battery when the power is used up so as to increase the life of the battery.

2.6 To switch ON and OFF

To switch on: Long press **End key** when the phone is in the OFF mode.

If the phone lock has been activated, you need to enter the 4-digit password to unlock. (The preset unlock code is 0000.)

If the UIM card has been inserted in the phone, and the related PIN code protection is activated, you need to enter the 4-8 digit password to unlock.

Warning: If you enter three wrong PIN codes in a row, the UIM card will be locked and you need to enter the PUK code to unlock. Both the PIN code and PUK code are provided by the network operator.

To switch off: In the standby mode, long press **End key**.

3 Phonebook

You can store names and phone numbers in the memory of the phone or UIM card.

Menu > Phonebook

3.1 To add a Contact

In idle, enter phone numbers.

Options > Save > Select the location for saving

Or: **Menu > Phonebook > New >** Select the location for saving
You can edit the name, mobile phone number, home phone number, company name, e-mail address, office phone number, caller picture, ringtone and group of each contact.

3.2 To search contact

Menu > Phonebook > Search contact > Enter characters
Options > Search

3.3 Caller groups

Menu > Phonebook > Caller groups
In the standby interface, choose Menu > Contacts > Group to display a group list. Press the left soft key. A small menu pops up with the following options: Group ring, Change group name, and Multiple SMS.

- Change group name: Change the name of the current group.
- Group ring: Select the ring tone for the incoming calls of the group.
- Multiple SMS: Send a short message to the current group.

3.4 Delete

Menu > **Contacts** > **Delete**.
The following menu options are displayed: **Multiple delete**, **Phone records**, **UIM records**, **Delete group record**, and **Delete all**. Press the upward/downward direction key to make the choice, and then press the **OK** key to confirm the deletion.

3.5 Copy All

Menu > **Contacts** > **Copy all**.
Copy contacts from: **Phone to UIM** and **UIM to phone**. If a contact in the phone has three phone numbers, three records with the same name will be created in the UIM card after the contact records are copied from the phone to the UIM card.

3.6 Import Record

Menu > **Contacts** > **Import Record**.
Import the vCard file from the Phone or the Memory card to the address book.

3.7 Export Record

Menu > **Contacts** > **Export Record**.
Encapsulate the address book into a vCard file and save it to the Phone or the Memory card as backup.

3.8 Speed Dial

Menu > **Contacts** > **Speed dialing**
The number key 1 represents the voice mailbox number. Number keys 2 to 9 can be edited. If the current number key has not been set, please press the left soft key or the **OK** key and then select a contact number from the address book. If the current number key has already been set, a small menu with three options is displayed after pressing the left soft key: **View**,

Edit, and **Remove**.
-View: View the phone number set for the number key.
-Edit: Open the address book and reselect a number.
-Remove: Remove the phone number set for the number key.
After setting the phone number and saving the settings, hold the corresponding number key in the standby interface to call that phone number.

3.9 Owner Number

Menu > **Contacts** > **Own number**
To view or edit the own number.

3.10 Memory Status

Menu > **Contacts** > **Memory status**
To view the memory capacity of the UIM card and the phone.

3.11 To dial a number from the Phonebook

Menu > Phonebook > Search contact > Input characters
Options > Search
The desired contact will be highlighted. Press **Send key** to make a call.
Tip: If the entry contains more than one numbers, the number selection screen will be displayed. You can select one and press **Send key** to dial.

3.12 To edit a Contact

Options > Edit
In the contact list of the phonebook, select the name card to be modified:

4 Calling

4.1 To dial from the Phonebook

Enter the **Phonebook**, select an entry from the entry list and press **Send key** to dial.

4.2 To activate 'mute' during a call

During a call, you can prevent the other party from hearing you:
While on call> Options>Press the Left Soft Key (LSK)

4.3 To view contacts during a call

Options > Phonebook
You can search a phone number from the Phonebook during a call:

4.4 DTMF (Dual Tone MultiFrequency) tone

During a call, you can select Open or Close the DTMF tone. When the DTMF tone is turned off, the digits entered will not be regarded as a DTMF signal response.

During a call:

4.5 Call forward

Menu>Settings>Call settings>Supplementary>Call forward
Forward a call to another number. This option consists of four sub-options, i.e. **Busy**, **No answer**, and **Default**. If select **Busy**, an incoming call will be forwarded to the preset phone number when another call is online. If select **No answer**, an incoming call will be forwarded to the preset phone number when the call is not answerer. If select **Default**, an incoming call will be forwarded to the preset phone number when phone is powered off or beyond network signal coverage.

4.6 Call waiting

Menu>Settings>Call settings>Supplementary>Call waiting
To answer another incoming call during the conversation, call waiting service should be supported by the network and has already been activated. Answering or rejecting the new incoming call is optional. After answering the new incoming call, press the answer key to switch between the two calls.

4.7 Conference Call

The phone supports Three-party Calling. A Three-party Calling, also called a multiparty call or a conference call, is a service based on call waiting. The function needs the support from the local network. In some districts, you can use the function only after you apply with the local network operator.
During a call, you may dial other numbers without hanging up the current call, and use the functions provided during the call to connect to new parties and make a three-way calling. You may conduct a three-way calling containing up to five parties.
Ask the other party of the current call not to disconnect, and select Options > Pause to hold the current call.
Select Options > **New call** to enter and dial a new number, then talk with him/her after he/she answers your call.
Select Options > Conference to connect all the parties and form a conference.

5 Call Logs

5.1 Missed calls/dialed calls/received calls

Menu>Call logs
View the list of missed/dialed and received calls. Select a contact from either of the three and choose to perform from the fnctions below:
View: View the desired entry
Call: Call the desired entry
Save to Phonebook: To save the number to the Phonebook
Edit: To edit the number to dial or save to the phonebook.
Send SMS: To write SMS to send to the number.
Send MMS: To write MMS to send to the number.
Add to blacklist: Add a number you wish to avoid/ignore under blacklist

Delete: To delete the entry.
Multiple delete: Delete all the registered entry in one go.

5.2 Duration

Menu>Call logs>Duration
View the: **Last call**, **Total received**, **Total dialed**, **Total call**, and **Reset all timers (the timer works newly)**.

5.3 Delete

Menu>Call logs>Delete
Delete all the records from missed calls, received calls, or dialed calls at one time, or delete all call records together.

6 Messages

6.1 Write new SMS

Menu > Messages > Write new SMS
Write the content of the SMS, **Options >**
Send: Select new message
Send to many: Send the message to multiple entries
Insert smiley: Insert a smiley to your message
Insert templates: Insert a template to your message
Insert phonebook: Insert a contact from the phonebook
Save to drafts: Save the message to drafts

6.2 Inbox

Menu > Messages > Inbox
To read a message, move to the entry and press **OK**
When reading a SMS, you can select **Options >**
View: View the current message.
Reply: Reply to the message.
MMS Reply: Reply to the current MMS.
Delete: Delete the current message.
Multiple choice: Delete or copy multiple messages at one time.
Copy to phone/Copy to UIM: Copy the current message to the Phone/UIM card. And the message must be saved in UIM card/Phone.
Move to drafts: Move the current message to the Drafts box.

6.3 Outbox

Menu>Messages>SMS>Outbox
The Outbox saves all short messages that failed to be sent.
View: View the message in the outbox.
Delete: Delete the message saved in the putbox.
Resend: Resend the message from outbox

Multiple choice: Delete or copy multiple messages at one time.
Copy to UIM: Copy the current message to the Phone/UIM card.
Move to drafts: Move the current message to the Drafts box.

6.4 Sent items

Menu > **Messages>SMS** > **Send items**
View: View the message in the outbox.
Delete: Delete the message saved in the putbox.
Resend: Resend the message from outbox
Multiple choice: Delete or copy multiple messages at one time.
Copy to UIM: Copy the current message to the Phone/UIM card.
Move to drafts: Move the current message to the Drafts box.

6.5 Drafts

Menu > Messages > SMS > Drafts
This allows you to read the Messages that failed to send and those saved during editing.
View: View the message saved in drafts
Edit: Edit the message
Delete: Delete message
Multiple delete: Delete all messages

6.6 SMS settings

Menu > Messages > SMS Settings
Priority setting: Set the priority to Normal or Urgent.
Message validity: Set the SMS period.
Delivery report: Specify whether a delivery report is required. This option can be set to ON or OFF. Note that the delivery report option is valid only for a short message sent to a CDMA mobile phone.
Preffered storage: Save the message to Phone or UIM memory. If it is set to Phone memory the received messages will be saved in the phone, unless the message capacity of the phone is full (then the received messages will be saved in the UIM card.
Save sent SMS: Specify whether to save the sent messages.
Templates: Set message templates.
Memory status: Show the message capacity of the phone and that of the UIM card.

6.7 Delete all

Menu > Messages > Delete all
Choose from the following options:
Inbox: Delete all the messages in the Inbox.
Outbox: Delete all the messages in the Outbox.
Send items: Delete all the messages in the Send items.
Drafts: Delete all the messages in the Drafts box.
All SMS boxes: Delete all the messages.

6.8 Voicemail server

Menu > Messages > Voicemail server

Set the voice mailbox number before using the voice mailbox function, select to listen to voice messages, and then perform operations according to the voice prompts given by the network.
Note: This function is UIM dependant; please contact your network operator for information regarding this feature.

6.9 MMS

Note: If the UIM card is not OMH UIM card, this menu will not be opened, indicating "Upgrade to OMH card for accessing Date Services". And the parameter of network is read from the OHM UIM card.

Menu > Messages > MMS > New MMS
Select **Option**:
Send: Send the MMS
Add: Contact, E-mail, New slide, Subject, Cc and Bcc.
Save as draft: Save the MMS as draft.
Save as template: Save the MMS as template.
Add: New slide, Subject, cc, bcc can be added.
Insert: Image, Ring, Video, vCard or others can be inserted.
Remove file: Remove the file inserted.
Preview: Preview the MMS.
Slide timing: Set the time between playing two slides.

6.10 MMS Inbox

Menu > Messages > MMS > Inbox > Option

Open: Open the MMS.
Reply: Reply the contact by MMS, SMS or call.
Forward: Send this MMS to other recipients.
Delete: Delete the MMS.
Delete all: Delete all the MMS.
Mark as read/unread: Mark the MMS as read or unread.
Lock /Unlock: Lock or unlock the MMS.
Sort by: Sort the MMS by date/time、subject、Read/Unread.

6.11 MMS Outbox

MMS which have been sent or can't be sent are stored in the Outbox.
Menu > Messages > MMS > Outbox > Option
Resend: Send the MMS again.
Delete: Delete the MMS.
Delete all: Delete all the MMS.
Lock /Unlock: Lock or unlock the MMS.
Sort by: Sort the MMS by date/time、subject、Read/Unread.

6.12 MMS Sent items

Menu > Messages > MMS > Sent items > Option
Resend: Send the MMS again.

Forward: Send the MMS again.
Delete: Delete the MMS.
Delete all: Delete all the MMS.
Lock /Unlock: Lock or unlock the MMS.

Sort by: Sort the MMS by date/time、subject、Read/Unread.

6.13 MMS Drafts

MMS saved during editing are stored in the Draft.

Menu > Messages > MMS > MMS Draftbox > Option

Forward: Send the MMS to a new recipient.
Delete: Delete the MMS.
Delete all: Delete all the MMS.
Lock /Unlock: Lock or unlock the MMS.

Sort by: Sort the MMS by date/time、subject、Read/Unread.

6.14 Templates

Add a template to your message
Add new: Add new template.
Delete: Delete the template.
Delete all: Delete all the templates.
Use in message: Use the template in MMS.

6.15 MMS Settings

Menu > Messages > MMS > MMS Setting

Send: View- Delivery Report, Read Report, Priority Setting, Save sent items, Validity period and Delivery time.
Receive: View- Send Delivery Report, Send Read Report, Retrieval mode and Save MMS Notification.
Compose: View Signature and Slide timing.
View mode: View Automatic and Manual.

Memory status: View the situation of memory, including Space used、Free space、Usage rates, Save to UIM.

7 Settings

7.1 Customized Phone & Call Settings

Functions	Description
Set time and date	**Menu > Settings > Phone settings > Time and date**
Schedule power off	**Menu > Settings > Phone settings > Schedule power off** To disable and enable status; to activate/deactivate, switch on/off, and time in turn.
Select language	**Menu > Settings > Phone settings > Language**

Display settings	**Menu > Settings > Phone settings > Display Settings > Wallpaper/Screen saver/Themes/Main menu style/backlight/brightness.**
Time format	**Menu > Settings > Phone settings > Time format**
Date format	**Menu > Settings > Phone settings > Dateformat**
Set greeting text	**Menu > Settings > Phone set > Greeting Text**
Dedicated key	**Menu > Settings > Phone settings > Dedicated key** By default: **Up >** FM Radio **Down >** Write new SMS **Left >** Inbox **Right >** Camera **Shortcut Keys: Set functions from the phone that you wish to put under the shortcut keys list.**
Preferred Input	**Menu > Settings > Phone settings > Dedicated key** Select the preferred text input
Set call waiting	**Menu > Settings > Call settings > Supplementary Service >Call waiting**
Set call forward	**Menu > Settings > Call settings > Supplementary Service >Call forward**
Call Firewall	**Menu > Settings > Call settings > Call firewall>** Allows you to either restrict all calls, add numbers to the black/white list.
Set white list	**Menu > Settings > Call settings > Call firewall>Incoming call firewall>Whitelist.** The phone will receive calls from only those numbers that have been saved under the whitelist.
Set the blacklist	**Menu > Settings > Call settings > Call firewall>Incoming call firewall>Whitelist.** Numbers stored under blacklist will NOT be able to call you.
Minute Reminder	**Menu > Settings > Call settings> Minute reminder** Select from a list of preset time numbers; the call will automatically get disconnected according to the time limit chosen by you.
SOS number setting	**Menu > Settings > Call settings> SOS number setting** Select from a preset list of emergency numbers.
Voice privacy	**Menu > Settings > Call settings> Voice privacy** Choose to enable or disable the 'voice privacy' feature to keep your conversations protected.
Plus converting	**Menu > Settings > Call settings> Plus converting** Allows you to make direct calls while on roaming (national/ international) without any prefix. Eg: you needn't put a 0 before calling numbers while your out of town.
Connection Settings	**Menu > Settings > Call settings> Connection Settings** **Afetr attaching the USB cable choose from the following 2 options:** **USB-disk**: Enable or disable the USB disk function. If USB disk function

	is enabled, a prompt message is displayed, indicating "Please connect USB". After inserting the data line, data can be transmitted to and from a computer. **Modem**: Enable or disable the modem function. If modem function enabled, a prompt message is displayed, indicating "Please connect USB". After the data line is inserted, a computer can dial up to the Internet via the phone.
Set information of BREW Connection	**Menu > Connectivity> BREW**
Restore factory default	**Menu > Settings > Security setup> Restore factory settings** **Tip:** You need to enter the phone password when you want to restore factory default. The preset phone password is **0000**. Please bear your password in mind. Incase you forget it, contact the local dealer or an authorized service center.

7.2 Profile Setup

Functions	Description
Activate the profile mode	Menu > Settings> User profiles > General> Activate
Set the ringtone for incoming calls	**Menu > Settings > User profiles > General > Edit profiles > Ring settings>Ring tone**
Set the ringtone for messages	**Menu > Settings > User profiles > General > Edit profiles > Ring settings>Message tone**
Set the ringtone for Alarm tone	**Menu > Settings > User profiles > General > Edit profiles > Ring settings>Alarm tone**
Adjust the volume of Ring Tone / Key Tone/Voice	**Menu > Settings > User profiles > General > Edit profiles > Volume Settings**
Set Alert Settings	**Menu > Settings > User profiles > General > Edit profiles > Alert settings** Choose from Ring/Viberate/Silent/Ring & Viberate
Set phone on 'silent'mode	**On idle screen press the alt key to activate silent mode.**

7.3 Security Setup

To access this folder please enter the default password: **0000**

Functions	**Description**
UIM Lock	**Menu > Settings > Security setup>UIM lock** Enable, modify, or disable the PIN. UIM card locking code (i.e. PIN) must be enabled before modifying it. **Warning:** If you enter three wrong PIN codes in a row, you need to enter the PUK code to unlock. PIN code and PUK code are provided by the network operator.

Phone lock	**Menu > Settings > Security setupr > Phone lock** The preset password is **0000**
Auto keypad lock	**Menu > Settings > Security setup> Phone lock > Auto keypad lock >** Select the time for the auto keylock. **Note**: Long press the 'sym' key on your keypad to lock/unlock the phone. The sym key icon is denoted with a lock key for you to easily identify.
Data security	**Menu>Settinsg>Security setup>Data security** Enter the default password **0000** to data protect your folders: phonebook, messages and call history.
SMS Firewall	**Menu>Settinsg>Security setup>SMS Firewall** Allows you to add numbers to the black/white list to bar SMS from these numbers.
Storage Erase	**Menu > Settings > Security setup> Storage erase** Delete data from the UIM, Phone or delete all.
Flight Mode	**Menu > Settings > Security setup> Flight mode**

8 Multimedia and Entertainment

8.1 Camera

Menu > Multimedia > Camera:
Choose from the following options:
Camera: Capture a picture
My photos: View photos
My sticker: Set the sticker picture picture to a contact as caller picture
Settings: Customize settings by choosing from the below:

- **Effect settings:** Set the special effects of photos, such as Grayscale, Sepia, Sepia Green and Colour Invert.
- **White balance**: Set White Balance.
- **Photo size:** Choose size of the photo
- **Delay time:** Set timer
- **Anti-flicker:** Select anti flicker
- **Flashlight:** Disable/Enable the flashlight

Storage: Select phone or memory card.

Restore default: Restore default settings.

Sticker shoot: On enabling this setting the picture will be clicked in the size of a sticker. The photo taken will automatically get saved in the '**my sticker' folder.**

8.2 Video Recorder

Menu > Multimedia > Video recorder
Two options are displayed: **Shoot**, and **Settings**.
Shoot: Enter the preview interface. Press the left soft key or the **OK** key to shoot. During the shooting, press the left soft key or the **OK** key to pause and press the right soft key to stop shooting. The video is automatically saved on the Memory card.
Settings: Set **size** (**176×144**, **128×96**, or **96×80**), **FPS** (**15 fps**, **20 fps**, or **30 fps**), and **Anti-flicker** (**50Hz** or **60Hz**).

8.3 Video Player

Menu > Multimedia > Video player
The memory card must be inserted to view the video player.
Select a video file, and then press the left soft key. A menu appears with the following options:
Play: Play the current video file.
Set as screen saver: Save the current video file as the screensaver.
Send by bluetooth: Send the current file via Bluetooth.
New folder: Create a new folder.
Delete: Delete the current file.
Delete all: Delete all the files in the **Video** folder, including the hidden folders and files.
Rename: Rename the current video file.
Details: View the attributes of the current file, including file name, file size, and file creation date.

In the video player interface, the following operations can be done:

Key	Function
OK key	Play/full screen
Left soft key	Play/Pause
Right soft key	Exit the player
Leftward direction key	Go backward by 6 seconds
Rightward direction key	Go forward by 6 seconds
Upward direction key	Increase the sound volume
Downward direction key	Reduce the sound volume

8.4 Sound Recorder

Menu > Multimedia > Sound recorder
On the Sound Recorder list screen, you can select:
Play: Play the current record file.
Set as ringtone: Set the current file as the ring tone for incoming calls.
Send by bluetooth: Send the current file via Bluetooth.
New folder: Create a new folder.
Delete: Delete the current file.
Delete all: Delete all the files in the **Record** folder, including the hidden folders and files.
Rename: Rename the current file.
Details: View the attributes of the current file, including file name, file size, and file creation date.

8.5 Music Player

Menu > Music player

The music player supports these formats: MP3, Midi, WAV, AMR and IMY.
Access the **dedicated music key** on the left side of the panel.
Create a playlist by adding a music file to the music player from the phone or the memory card.

8.6 FM Radio

Menu > Multimedia > FM radio

In the FM radio Interface, press the Left and the Right key to adjust the channel automatically, or the Up and Down key to adjust the channel manually. Press the OK key to open or close the FM radio. Press the RSK key to exit FM radio interface or play background. If you press the LSK key, a small menu will be displayed with the following options: **Channel list, Manual input, Auto search, Handsfree/Headset, Save**.
-**Channel List**: Enter into the channel list interface. You can edit any list as you want.
-**Manual input**: Edit the current channel. -**Auto search**: Search the channel automatically,

and save it to the channel list.
-**Handsfree/Headset**: Switch the sound between loudhailer and headset.
-**Save**: Save the current channel.

Note: To increase/decrease the volume, press the volume keys on the side panel or press +/- symbols.

9 Fun & Games

9.1 Games

Menu >Applications> Games

9.2 Java

Menu > Applications> Java
You can install Java applications to enhance the multimedia function. It also allows you to connect to Facebook, Nimbuzz and Operamini as well.

Java download
Open the website which is stored in the OMH UIM card to download some Java MIDlet (file of jar or jad) which can be installed into handset.
If the UIM card is not OMH UIM card, this menu will not be opened, indicating “Upgrade to OMH card for accessing Date Services”.

10 Bluetooth

Tip:
1. You can connect wirelessly to other compatible device with Bluetooth technology. Compatible devices may include computers, mobile phones. You can use Bluetooth connectivity to send images, music and sound clips, video clips, and notes.
2. Since devices with Bluetooth wireless technology communicate using radio waves, your device and the other devices need to be within a range of 10 meters from each other, but the connection may be subject to interference or could face obstruction from stuff such as wall or from other electronic devices. Use the wireless technology of bluetooth to be able to consume battery quantity of electric charge. If you are restricted by something when using bluetooth technology, consult your local Micromax support/service station.

10.1 To Activate/Deactivate Bluetooth Connectivity

Menu>Connectivity>Bluetooth
View: **Activate/Deactive Bluetooth**, **Paired devices**, **Settings**, and **About**.
Activate Bluetooth / Deactivate Bluetooth: When the Bluetooth is activated your phone will indicate: BT activated, similarly, when your Bluetooth is deactivated your phone will indicate: BT deactivated.
Paired devices: Show the bonded Bluetooth device. If no Bluetooth device is bonded to the

phone, a prompt message is displayed, indicating "No bonded devices". Press the left soft key, and then select **Search new device**. When a Bluetooth device is found, press the **OK** key or the left soft key to bind it to the phone.
Settings: Define the name of the Bluetooth device and the storage position of the files received via the Bluetooth device.
About: Show details about the Bluetooth device.

11 Organizer & Other Applications

Functions	Description
View the calendar	**Menu > Organizer > Calendar**
Memo	**Menu > Organizer > Memo**
View the events in the to do	Menu > Organizer > To do **Options > View** Or: **Menu > Organizer > Calendar** **Options > View tasks**
Set the alarm	**Menu > Organizer > Alarm > Edit**
World clock	**Menu > Organizer > World clock**
Timer	**Menu > Organizer > Timer**
Stopwatch	**Menu > Apllications > Stopwatch > Typical stopwatch > Split timing/Lap timing / View record** Press **Start** to start timing, and press **Split / Lap** continuously to record more than one time. Press **Done** to save the time. Menu > Extra > Stopwatch > nWay stopwatch Press **Start** to start timing**,** and press the corresponding **Navigation key** to activate the sub-timing. The main timing will continue to add. Select **Stop** to stop the main timing and the sub-timing. Press **Reset** to clear all the time.
Calculator	**Menu > Applications > Calculator**
Currency exchange	**Menu > Applications > Currency exchange** Input the exchange rate and Press **OK**. Select the exchange rate, input the figure and press **OK.**
Text Reader	**Menu > Applications > Text Reader**

12 File Manager

When an USB cable is connected, you can use the phone as a USB mass storage.

Functions	Description
View folders	**Menu > File manager> Options > Open** Select folders: Phone or Memory card On selecting the 'phone' folder you can view the following options: **Phone** **Download picture**: the folder where the pictures downloaded via the WAP browser are stored by default. **Download music**: the folder where the music files downloaded via the WAP browser are stored by default. **Download video**: the folder where the video files downloaded via the WAP browser are stored by default. **My photos**: the folder where photos are stored. **My sticker**: the folder where caller ID pictures are stored. **Received files**: the folder where the files received via Bluetooth are stored. **VCARD**: the folder where vCard files exported from the address book are stored. **Vcalendar**: the folder where VCS files exported from the Schedule are stored. **Java**: the folder where Java installation files are stored. On selecting the 'memory card' folder you can view the following options: **Memory card** **Menu** > **Gallery** > **Memory card** to enter the Memory card. Some folders are automatically created on the Memory card: **Photos**: the folder where photos are stored. **Video**: the folder where video files are stored. **Record**: the folder where record files are stored. **Music**: the folder where the downloaded music files are stored. **Ebook**: the folder where E-books are stored. **Received**: The folder where the files received via Bluetooth are stored. **Sticker**: the folder where sticker photos are stored. **Phone book**: the folder where vCard files exported from the address book are stored. **Vcalendar**: the folder where VCS files exported from the Schedule are stored. **Java**: the folder where Java installation files are stored.

13 WAP Services

13.1 WAP Browser

Menu > Connectivity > WAP
To use the WAP function, please insert a valid OMH UIM card and the network parameters will be read from the card.
If the UIM card is not OMH UIM card, this menu will not be opened, indicating “Upgrade to OMH card for accessing Date Services”.

14 UTK

14.1 UTK Services

If your UIM card supports UTK, you may use the corresponding value-added services.
Menu > Connectivity> UTK Services

15 Maintenance

Use a dry soft cloth to wipe general dirt.
Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of colour.

16 Taking Care of your Device

- Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:
- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use chargers indoors

17 After Services

For details, see the After Service Guide supplied with the phone.

18 Inputting Text

You can enter text in English.